

First Stage Leak Testing



Steps to Leak Testing

Attach 30# Pressure Gauge to Presto-Tap LDS2000/RV

Turn on service valve charging gas system

Close service valve and reduce pressure by 5# unlocking regulator so that entire system is communicating with gauge

Note: NFPA 58 2020 reduce by 2#

Observe gauge for any increase or decrease in pressure for SOP and applicable code

Rise in pressure indicates faulty seat in service valve

Decrease in pressure indicates a leak in system

The information contained in this presentation is for informational purposes only, and is not intended as a substitute for legally required training

