# **Service Valves for DOT Fork Lift Containers** 9101P5 and 9101P6 Series

### Application

Designed specifically for vapor or liquid withdrawal service on DOT fork lift containers. Valves with 1.5 GPM closing flow are for use in small and medium size lift truck applications, while those with 2.6 GPM closing flow are for large lift trucks. Since none of these valves have an integral pressure relief valve, they may only be used as an accessory valve on containers that have an independent pressure relief valve sufficient for that cylinder's capacity.

The integral excess flow valve found in all these service valves helps prevent excessive product loss in the event of fuel line rupture.

When installed for liquid withdrawal, the 9101P6 Series has provisions for attachment of a liquid withdrawal tube. The 9101P5 Series must be installed in containers that have provisions for a separate liquid withdrawal.


To ensure proper functioning and maximum protection for integral excess flow valves, these service valves should be fully opened and backseated when in use.

#### Features

- Incorporates integral excess check valve and shut-off valve in one unit
- Special 1.5 GPM closing flow on select valves provided especially • for lift trucks and equipment with smaller engines.
- Double lead stem thread provides faster opening and closing.
- O-Ring stem seal design provides positive seal.
- Tapered and confined seat disc provides positive shut-off.
- Metal-to-metal back seat provides added protection against leakage while the valve is open.
- 9101P6 Series equipped with a 1/4" NPT internal thread for the • addition of a liquid withdrawal tube.

# **Materials**

Body	Forged Brass
Handwheel	Aluminum Die Cast
Stem	Brass
O-Rings	Resilient Synthetic Rubber
Seat Disc	

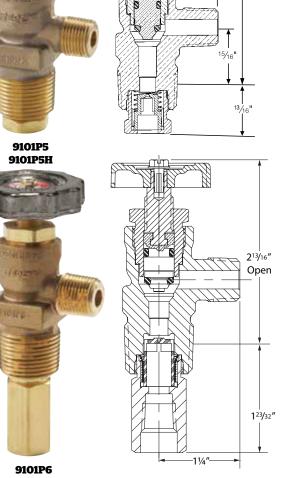

11/2

2¾" Approx.



(Ůľ



## **Ordering Information**

				Closing Flow (LP-Gas)			Approximate Filling Rate Liquid Flow, GPM				Accessories		
			Liquid	Vaj		Pres	sure Drop Across Valve		ACME Check Connectors				
Part Number	Container Connection	Service Connection	Withdrawal Connection	25 PSIG Inlet (SCFH)	100 PSIG Inlet (SCFH)	Liquid (GPM)	10 PSIG	25 PSIG	50 PSIG	100 PSIG	Male	Female	Cap
9101P5	- ¾" M. NGT	%" M. NPT	None	430	900	1.5	- 5.0	7.6	10.7	14.9	- 7141M	7141F	7141M-40 or 7141FP
9101P5H				550	1050	2.6							
9101P6			1⁄4" NPT	430	900	1.5	4.5	7.2	10.3	14.8			
9101P6H				550	1050	2.6							

Note: These valves incorporate an excess flow valve. Refer to L-500/Section F, for complete information regarding selection, operation and testing of excess flow valves.

